






















CS No	OEM No	Tractor	Engine	Description
Crankshafts & Related Parts				
46076	006017191C1	605		Crankshaft 
46077	006004501F1	555		Crankshaft 
46079	000021441E07	275DI		Crankshaft 
46094	006004502F1	605		Crankshaft 
46129	006000283F1	7575, 8000, 8560		Crankshaft
46157		585		Cranskaft 4 Cylinder 
46158		585		Cranskaft 3 Cylinder 
46009	006003719F91	605		Flywheel Assembly 


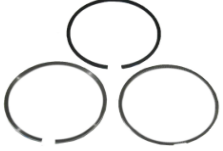 
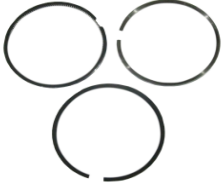 
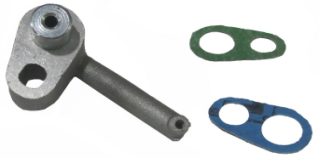 





CS No	OEM No	Tractor	Engine	Description	
46026		585		Main Bearing STD	
46027		585		Connecting Bearing STD	
46028		605		Main Bearing STD	
46028A				Main Bearing 010	
46029		605		Connecting Bearing STD	
46029A				Connecting Bearing 010	
46004	000020889E05 000020890E05			Thrust Washer Set STD	
46004A				Thrust Washer Set 010	
46130	006004888F1 006004887F1	7060, 8000, 8560		Main Bearing STD	
46131	006004886F1	7060, 8000, 8560		Connecting Bearing STD	
46047	000020524E05 000020369E05	605, 4500, 6500		Main & Timing Seal Set	

 






CS No	OEM No	Tractor	Engine	Description
46048	000020524E05	605, 705, 4500, 4530, 5500, 5520, 5525, 5530, 6000, 6025, 6030, 6500, 6520, 6525, 6530, 7010, 7030, 7060, 7520, 8560		Main Crankshaft Seal 
46049	000020369E05	605, 4500, 6500		Timing Seal 
46051		585		Main & Timing Seal Set 
46135	006000876F1	7060, 7575, 8560		Front Seal
46054	006004203F91	605, 4500, 6500, 7030, 7575		Connecting Rod 
46062		585		Connecting Rod 
46115	000020151E05	705		Connecting Rod 
46132	006009708F91	8560		Connecting Rod



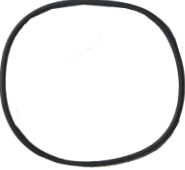




CS No	OEM No	Tractor	Engine	Description
46116	000020337E05	605, 705, 8000		Bush Connecting Rod 
Pistons, Ring Sets & Cylinder Liners				
46010	006004552F91	605 DI, 705, 7030		Piston Ring Set 
46040	006004420F91	605, 7030		Piston Ring Set 
46134	006009707F91	8560		Piston Ring Set
46059	006000571F91	605		Piston Cooling Jet with Gasket 
46017	000020778E05	6030, 6530, 7030, 7575, 8000		Piston Cooling Jet with Gasket 
46075	006018403E1			Cylinder Liner 
46119	000020899E05	605, 7030		Cylinder Liner 


 



CS No	OEM No	Tractor	Engine	Description	
46128	006002655F1	7060, 8560		Cylinder Liner	
46118	000020375E05	605, 705		O Ring Cylinder Liner	
46081	000020514E05	605		Piston	
46117	000021742E14	605		Piston	
46133	006009707F91	8560		Piston	
46151	005554074R91			Piston	
Cylinder Head & Related Parts					
46022	006004940F91	8000		Cylinder Block	
46019	000020345E05	605, 6030, 6530, 7030, 8000		Stem Seal	











CS No	OEM No	Tractor	Engine	Description
46035	006000113F91	605		Engine Block Complete 
46036	006000069F91	605		Cylinder Head for S Type Injector 
46065	000020857E05	605		Engine Valve Set (8 Pieces) 
46066	000020351E05	605		Intake Valve
46067	000020352E05	605		Exhaust Valve
46136	006009146F91	8560		Engine Valve Set (8 Pieces)
46078	000021606E09	605		Exhaust Manifold 
46082	000020127E05	605		Camshaft 



CS No	OEM No	Tractor	Engine	Description
46108	006000077F1	605, 705		Retainer Upper 
46154	006000250F1	7575, 8000		Turbocharger 
Engine Gasket Sets				
46016	000020855E05	6030, 6530, 7030, 8000		Full Gasket Set 
46046	006000798F1	605		Cylinder Head Gasket 
46125	006009130F1			Engine Gasket Set
Oil Pumps & Related Parts				
46034	006002555C92	605		Oil Pump 
46123	006004090F91			Oil Pump
46114	006000339F1	605, 7030		Oil Cooler 







CS No	OEM No	Tractor	Engine	Description
Fuel System				
46080	000020665E05	605		Dipstick 
46095	007700020C91	605, 7030		Fuel Tank Sender Unit 
46122	000061262M01	605		Fuel Tank Cap 
46138	006000466F1	605, 705		Injector 'S' Type 
Cables				
46083	007601914C3			Stop Cable 
46091	000041943C12			Handbrake Cable 
46100	000060916M01	605, 705		Handbrake Cable 
Radiators & Related Parts				
46089	006009834C91			Radiator Assembly 



CS No	OEM No	Tractor	Engine	Description	
46111	006004659C91			Radiator Assembly	
46126	E006008643F91	7060, 8560		Radiator Assembly	
46109	006000430F1	605, 705		Hose Outlet Radiator	
46110	006004567C1	605, 705		Hose Inlet Radiator	
Water Pumps & Related Parts					
46003	006002033C91	705, 7030		Water Pump	
46020	006005618F1	8000		Water Pump	
46127	E006019574D91			Water Pump	
46112	000020318E05	705, 7575		Thermostat Assembly	



CS No	OEM No	Tractor	Engine	Description
46113	000020325E05	605, 705		Fan Belt 
Filters				
46037	00600455F2	605		Element
46038	00600455F1	605		Outer Air Element
46042	007202697C91	605		Hydraulic Filter
46043	06002508F1	605		Oil Filter
46086	007202702C1	605		Filter 
46088	006017310B1			Oil Filter 
46090	000051215D01			Hydraulic Filter 











CS No	OEM No	Tractor	Engine	Description
46092	000020316E05			Oil Filter 
46104	000051460D01	605, 705		Filter Element 
46107	001081778R93	605		Filter Secondary 
Lighting				
46072	007700074C91	605, 7030		Headlamp 
46073	000060517M01	605, 7030		Lamp Parking Front LH 
46074	000060516M01			Lamp Parking Front RH 
46120	007700588C91	8000		Rear Lamp LH 
46121	E007700589C91	8000		Rear Lamp RH









CS No	OEM No	Tractor	Engine	Description
Starter				
46137				Starter 
Transmission				
46024	006504714C1	6030, 6530, 7030		Shaft 
46025	006505068C1	6030, 6530, 7030		Shaft 
46039	006502652C1	605		Adaptor Splined 1st/2nd Gear 
46045	006502649C1	605		Shaft Reverse idler 
46050	006502634C1	605		Coupling 
46053	006502639C1	605		Gear Driven 
46055	006502654C1	605		Adaptor Splined 








CS No	OEM No	Tractor	Engine	Description
46057	001127032R91			Pinion 
46061	006502642C1	605		Gear Reverse 
46063	006501546R1	605		Ring Control Shifting 
46064	006502464R2	605		Hub 
46087	006511444C1			Synchroniser Ring 
46139	000012068P04	7060, 7575, 8000		Synchroniser 
46140	006506533D1	6565, 7060, 8000		Countershaft 
46141	006505258D1	8000, 8560		4th Gear 



CS No	OEM No	Tractor	Engine	Description	
46142	006505256D1	8000, 8560		3rd Gear	
46143	006504950D1	8000, 8560		1st Gear	
46144	006506534D1	6565, 7060, 8000		Cluster Gear	
46145	000016341P04	6565, 7060, 7575, 8000		Fork	
46146	000016356P04	6565, 7060, 7575, 8000		Gear Reverse	
46147	000016641P04	6565, 7060, 7575, 8000		PTO Gear	
46155	001233330R91	605		Bearing	
PTO					
46103	000032542B12	605, 705, 7030		PTO Shaft Assembly	



CS No	OEM No	Tractor	Engine	Description
Brakes				
46101	006501226C1	605, 705		Brake Boot LH 
46102	006501228C91	605, 705		Brake Disc 
Steering				
46060				Steering Bearing 
46069	007205734B92	605		Steering Control Unit 
46159		605		Steering Shaft Key Type 
46160		605		Steering Shaft Spline Type 
Clutch Assemblies & Plates				
46000	006505451C91	605		Clutch Assembly 
46001	006505933C1			Clutch Bearing









CS No	OEM No	Tractor	Engine	Description
46153	000016668P04	7575, 8000		Clutch Bearing Assembly 
46156	005558288R92	605		Clutch Release Bearing 
46002	000032601B12			Clutch Plate 
46007	E006505589D1	8000		Clutch Assembly 
46023	E006510095D91	9200		Clutch Plate 
46041	00650028R91	605		Oil Seal
46148	E006503643D91	7060, 8000		Clutch Assembly 
46149	006507532C91	605		Clutch Plate 

 




 


CS No	OEM No	Tractor	Engine	Description
46150	006507531C91	605		Clutch Assembly 
46152	006505590D1	8000		PTO Plate
Front Wheels				
46030	000041195C08	605		Wheel Rim
Front Axle & Related Parts				
46033	007600435C1	605		Front Axle Support 
46052	007601008C11	605, 4500, 6500		Spindle LH 
46071	007601009C11	605, 4500, 6500		Spindle RH 
46056	007500051C1	605		Front Wheel Hub 

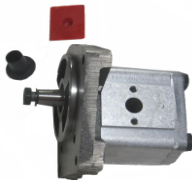

CS No	OEM No	Tractor	Engine	Description
Tie Rods & Sockets				
46021	007201345C92			Tie Rod End Assembly 
46106	007201050C91 007201051C91	605, 705, 4500, 5500, 5530, 6000, 6030, 6500, 6530		Tie Rod 
Hydraulic				
46011	005554403R1	605, 705, 7030, 8000		O ring 
46012	005554402R1	605, 705, 7030, 8000		O ring 
46013	005554401R1	605, 705, 7030, 8000		O ring 
46014	005554399R1	605, 705, 7030, 8000		Cylinder
46015	000051564D01			Piston
46018	E007202366D91	6565, 7060, 8000		Tandem Pump 

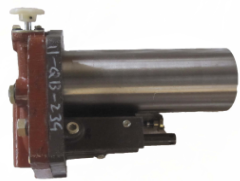

CS No	OEM No	Tractor	Engine	Description
46068	GD5-12-G9FR-20- IN184 931270			Single Pump 
46070	007201885C91	605		Tandem Pump 
46105	000051633D01	605, 705		Tandem Pump
46124	000013797P04	7575, 8560		Tandem Pump
46044	000051152D01	605		Spool Control Valve 
46058	007202389C1	605, 7030, 8030		Coupling Spider 
46093	000020198E05	605, 7030, 8030		Connector Hydraulic Pump 
46084	007203023C91	605		Control Valve 



CS No	OEM No	Tractor	Engine	Description
46085	007203021B91			Control Valve 
Linkage Parts				
46161		605		Lower Link
46162		605		Levelling Assembly
46163		605		Top Link
Body Parts				
46031	007505301C12	605		Front Grill 
46032	007517029C92	605		Sliding Seat
46099	007535056C93	605		Sliding Seat 
46096	007535173C91	705		Bezel, Instrument Panel Assembly



CS No	OEM No	Tractor	Engine	Description
46097	000060344M01	605, 705, 7030, 8000		Grille, Side Panel
46098	000060350M02	605, 705, 7030		Grille Assembly Front